

Driver installation.

Unplug your Pana-Scan from your computer before proceeding

If you have already loaded a previous version of the Pana-Scan "OVT" driver, please go to the control Panel

- 1) Uninstall the version of the "OVT" driver you have loaded
- 2) Re-boot your computer
- 3) Determine which version of the Pana-Scan "OVT" Driver you need 32 bit or 64 bit driver you need by following these steps on your computer:
 - A) Go to your Desktop,
 - B) Right Click the Mouse on My Computer
 - C) Select "property"
 - D) In open window will see the system edition (If you do not see 64 bit in the window, load the 32 Bit version).
- 4) Download either the 32 bit or 64 bit driver and save
- 4) To Install the new driver Unzip the driver into a directory that you will be able to locate easily on your computer (Example C:\NEW OVT Driver)
- 5) Locate the directory you unzipped your files to
- 5) Click on the Setup Icon and follow the on screen instructions
- 6) Plug the Pana-Scan in and follow instructions from instruction book